


ELECTRICAL COMPONENTS

INSTALLATION INSTRUCTIONS

SHIFT SOLENOID for AXODE/AX4S/AX4N



96953U 15 to 25

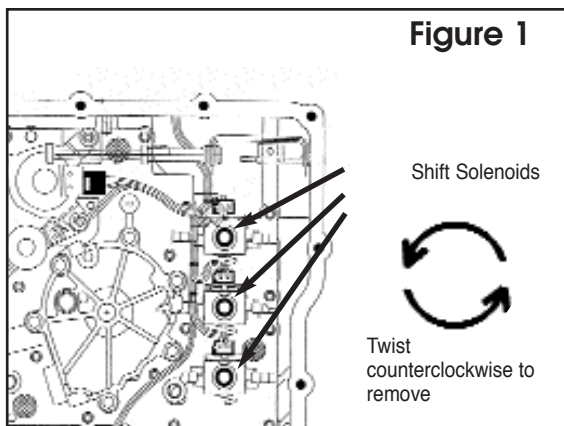

1. To Remove: Depress the spring tab and twisting the solenoid to the left until it clicks (**Figure 1**). Pull the old solenoid from the valve body.

2. To Install: Insert the new Teckpak Shift Solenoid (**Figure 2**) into the valve body and secure by twisting to the right until it clicks. Connect wiring harness.

